



Stretch Belt Mate™ Kit



Use for all stretch fit belt applications


- Universal installation and removal of all stretch fit belts
- Easily installs all stretch fit belts
- Allows removal and reuse of stretch fit belts

Installation




Installation tool on pulley


Position belt on accessory drive pulley (i.e. A/C compressor, P/S pump, Alt.)

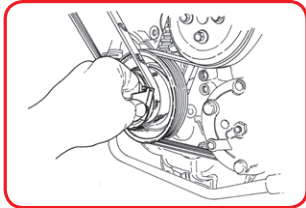

1. Place installation tool over crankshaft pulleys with belt on leading edge of tool

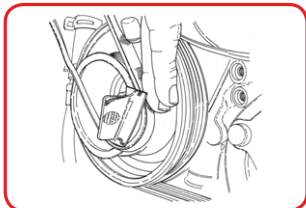

2. Use a ratchet to turn crankshaft in clockwise direction

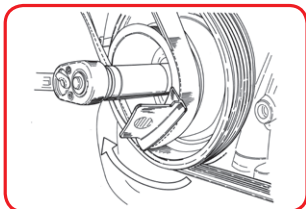


3. Guide belt on to pulley and ensure belt ribs are properly aligned


Removal



Removal tool on pulley

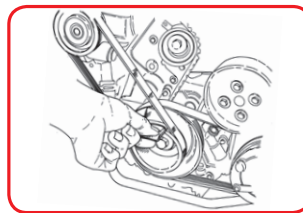

1. Position removal tool between pulley and belt as shown

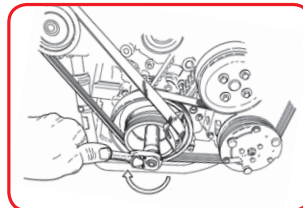

2. Use a ratchet to turn crankshaft in clockwise direction

Belt will be lifted off pulley and slide off tool



PATENT PENDING

Part No: 70990

PBT USA Inc
 13795 Rider Trail North
 Suite #109
 Earth City, MO 63045
 USA
 Phone: 314 219 0999
 Fax: 314 219 0097
 Toll Free: 877 PBT USA4
 877 728 8724

Internet: www.pbtusa.com
 Email: sales@pbtusa.com

PBT Australia Pty Ltd
 A.B.N. 72 067 983 475
 13/121 Kerry Road
 Archerfield QLD 4108
 Australia
 Phone: +61 7 3274 3800
 Fax: +61 7 3275 3251
 Internet: www.pbtusa.com
 Email: sales@pbtusa.com